

FOOTWEAR FIT GUIDE

*Locate street shoe size to begin.

Women and Girls – Sizes 3 to 14														
	Sizes Smaller						Street Shoe Size				Sizes Larger			
	-3	-2.5	-2	-1.5	-1	-0.5					+5	+1	+1.5	+2
Ballet & Pointe	176 176ES						102 117 121 121ES 126	128 197 199 205 205S	1136W 1138W 1142W 2027 2028	2030 2039 H22U	207			
Tap & Character				442 443 K360			456 459 551 561 562 650	653 657 657 671 700 750	3800 CG09 CG16 CG17 CG18 CG19	CG55 CHORUS K540 K542 N625	550			
Jazz & Dansneaker							CP01 CP05 DS03	DS11 DS19 DS24	DS29 DS30 EJ1	EJ2 FF01 PP17	CG05 CG15			
Lyrical, Modern, Gym			BR1000 BR1000P				321 EM1	EM2 FF01	H21U H22U	H07 PP323				
Dancesport & Social Dance			SD103				BR74 BR137 BR138 BR187R BR191	BR192 BR1921 BR195 BR196 BR197	BR198 BR231 BR232 BR301 SD01	SD02 SD02S				

Children – Sizes 6 to 2.5										
	Sizes Smaller			Street Shoe Size			Sizes Larger			
	-3	-2	-1				+5	+1	+1.5	+2
Ballet & Pointe				205C 205T 205X	207C 205SC 2028C	2030C 2033C 2037C		200C 200T		
Tap & Character		442C	CG2002C	443C 457C 3800C	3800T CG16C CG17C	CG55C N625C		550X		
Jazz & Dansneaker				CP05C DS03C	DS11C DS24C	EJ2C PP17		CP01C CG05C CG15C EJ1C		
Lyrical, Modern, Gym				321C EM1C	EM2	PP323C				

Men and Boys – Sizes 6 to 15												
	Sizes Smaller			Street Shoe Size				Sizes Larger				
	-3	-2	-1					+5	+1	+2		
Ballet				2020	2021			200		2030	20321	
Tap & Character				442 443	442B	K360			CG09 CG16	CG17 CG18	CG19 CG55	CG100 K540 K542
Jazz & Dansneaker									CG05 CG15 CP01 CP05	DS03 DS11 DS19	DS24 DS29 DS30	EJ1 EJ2 FF01 PP17
Modern, Gym									EM1 EM2	FF01 HO61	HO62 H21U	H21U
Dancesport & Social Dance				BR02 BR116 BR1000	BR1000P BR1001 BR1002	BR1003 BR1004	SD09 SD103				BR74	

Women						
	Petite	Small	Medium	Large	X-Large	XX-Large
footUndeez	4-5	6-7	8-9	10-11	12-13	14-15

Children						
	Petite	Small	Medium	Large	X-Large	XX-Large
footUndeez			11-12	1-2	2-3	

Men						
	Petite	Small	Medium	Large	X-Large	XX-Large
footUndeez	6-7	8-9	10-11	12-13	14-15	16+

*Half sizes or extreme feet go up to next size.